



5360050

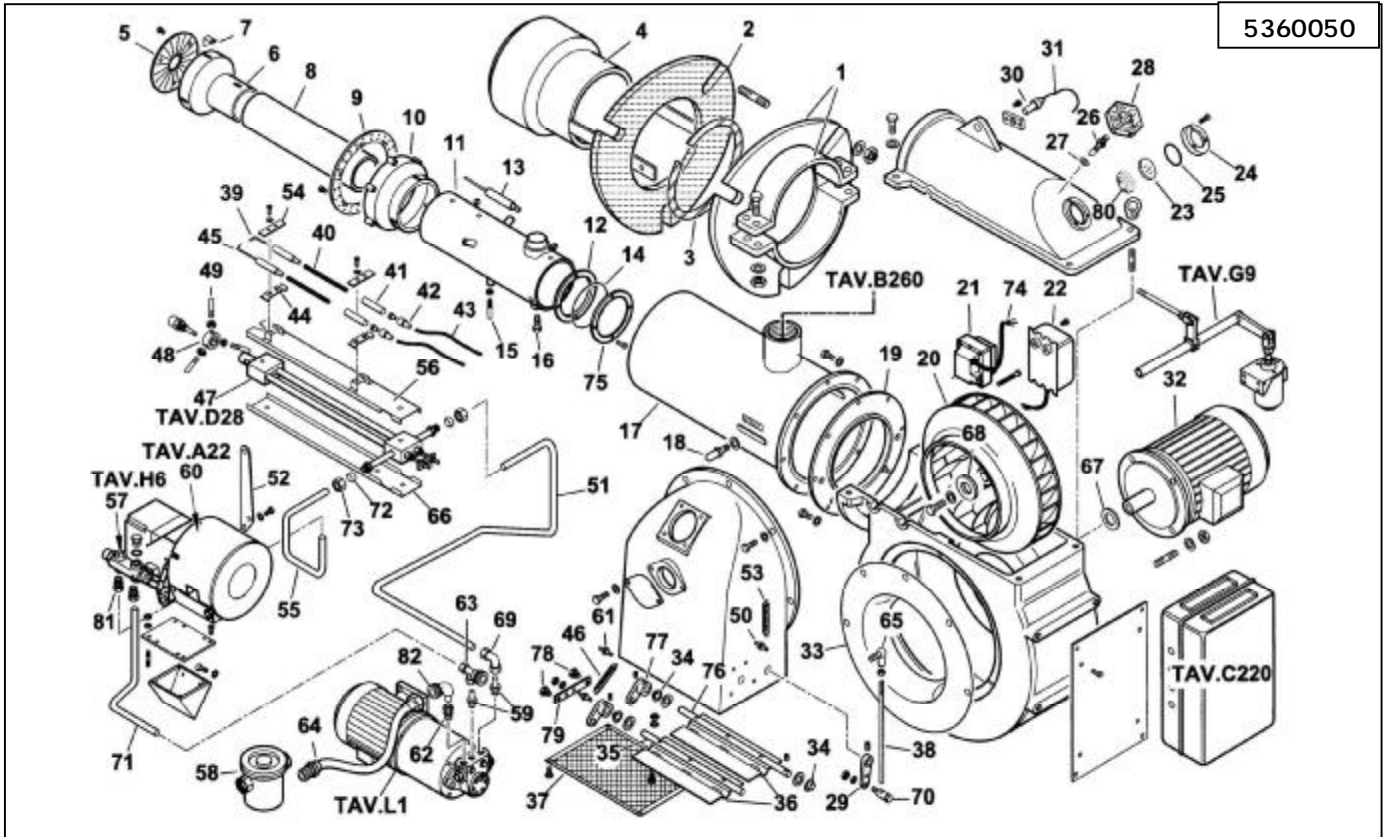

Key	Part No	Description	Key	Part No	Description	Key	Part No	Description
1	B07-0006020159	Flange	32	B07-30104	Motor	61	B07-35620	Screw
2	B07-17791	Flange Gasket	33	B07-13028	Air Inlet Guide	62	B07-23077	Connector
3	B07-23215	Cord Seal	34	B07-34314	Bush	63	B07-27663	T Connector
4	B07-33756	End Cone	35	B07-57033	Air Damper Pin	64	B07-0005070456	Flexible Oil Line
5	B07-33733	Oil Brakeplate	36	B07-57029	Air Inlet Flap	65	B07-18695	Elbow Fixing
6	B07-33732	Oil Head	37	B07-0012010076	Air Inlet Guard	66	B07-44133	Lower Cover
7	B07-39072	Bracket	38	B07-57239	Linkage	67	B07-29364	Spacer
8	B07-33754	Air Tube	39	B07-27779	Right Electrode	68	B07-17887	Spacer
9	B07-33731	Gas Brakeplate	40	B07-45072	Extension	69	B07-23074	Elbow
10	B07-33726	Gas Head	41	B07-19424	Insulator	70	B07-19555	Linkage Clamp
11	B07-62530	Gas Pipe	42	B07-0005060037	Ignition Cable Cap	71	B07-57108	Oil Pipe
12	B07-33669	Sealing Ring	43	B07-30223	HT Cable	72	B07-23825	Olive
13	B07-33758	Electrode	44	B07-34459	Bracket	73	B07-23832	Nut
14	B07-31424	O-Ring	45	B07-27778	Left Electrode	74	B07-0005130136	Transformer Lead
15	B07-39022	Screw	46	B07-18393	Spring	75	B07-33700	Flange
16	B07-37026	Screw	47	B07-44100	Nozzle Line Assy	76	B07-57036	Air Damper Pin
17	B07-62528	Burner Tube	48	B07-27669	Support	77	B07-35677	Lever
18	B07-18476	Screw	49	B07-57133	Screw	78	B07-35619	Bush
19	B07-33531	Flange	50	B07-17979	Screw	79	B07-57232	Lever Bracket
20	B07-29361	Fan	51	B07-62506	Oil Pipe	80	B07-38610	Sight Glass
21	B07-0005020030	Gas Transformer	52	B07-44545	Bracket	81	B07-23076	Connector
22	B07-57024	Oil Transformer	53	B07-18622	Spring	82	B07-27677	Elbow
23	B07-38609	Clear Sight Glass	54	B07-61299	Bracket			
24	B07-38611	Sight Glass Holder	55	B07-57107	Oil Pipe		TAV.C220	Control Panel
25	B07-23299	O-Ring	56	B07-44132	Upper Cover		TAV.A22	Mod. System
26	B07-18722	Nipple for Airtake	57	B07-16320	Regulating Valve		TAV.D28	Nozzle Line
27	B07-4987	Washer		B07-30875	Filter		TAV.G9	Magnetic Assy
28	B07-30245	Pressure Switch	58	B07-95043	Cartridge		TAV.B260	Gas Train
29	B07-16301	Lever		B07-95100	Seal		TAV.L1	Pump
30	B07-30895	Photocell Flange	59	B07-57058	Nipple		TAV.H6	Valve Assy
31	B07-30837	Photocell	60	B07-16279	Mod. System			

Control Panel – BDC 300 Modulating


TAV.C220

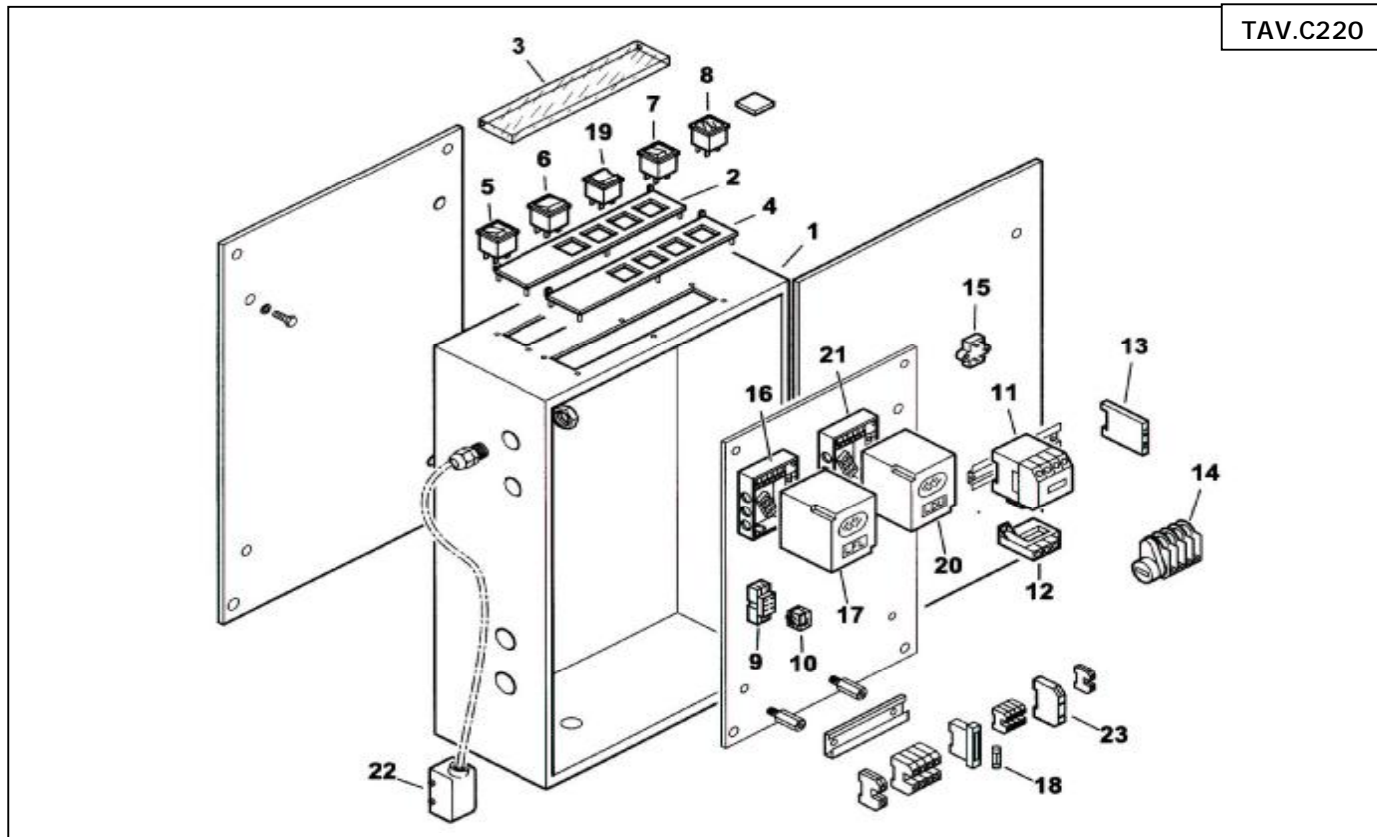

Key	Part No	Description	Key	Part No	Description
1	B07-0012070011	Box	12	B07-0005110069	Overload
2	B07-0006060008	Switch Panel	12	B07-0005110074	Overload
3	B07-61228	Cover	13	B07-0005110078	Auxiliary contactor
4	B07-0006060005	Switch Panel	14	B07-23005	Motor
5	B07-0005120039	On/Off Switch	15	B07-0005020034	Filter
6	B07-0005120041	Fuel Selector Switch	16	B07-23525	Wiring Base
7	B07-0005120040	Lock Out Light	17	B07-0005030071	Control Box
8	B07-0005120058	Fuel Indicator	18	B07-7456	Fuse
9	B07-0005110006	Relay Base	19	B07-0005120038	Manual Switch
10	B0-30677	Relay	20	B07-31367	Control Box
11	B07-0005110051	Contactor	21	B07-23528	Wiring Base
	B07-0005110056	Contactor	22	B07-0005130044	10 Pole Connector
	B07-0005110079	Contactor	23	B07-23062	Bridge

BDC 300 – Modulating System


TAV.A22

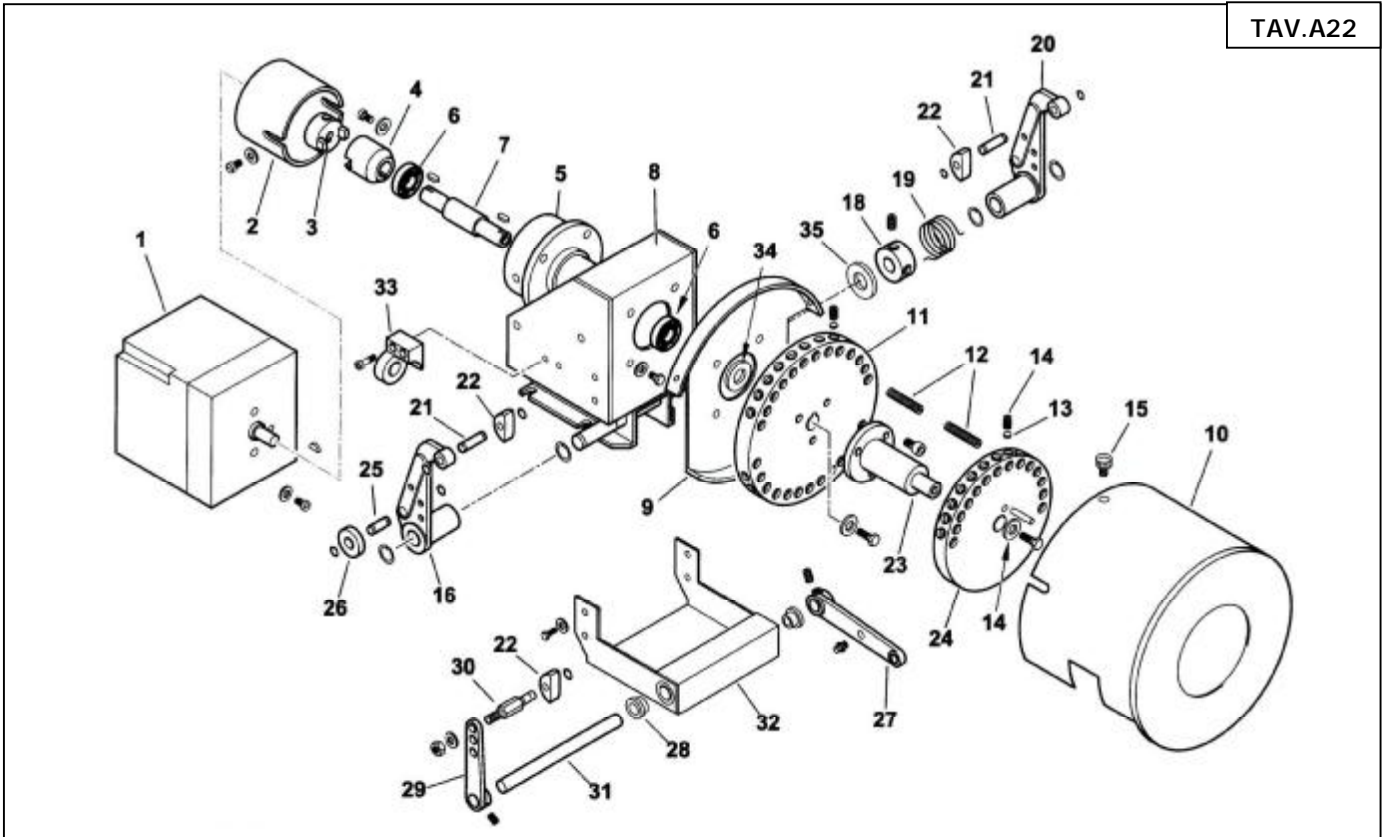

Key	Part No	Description	Key	Part No	Description
1	B07-31071	Servo Motor	20	B07-18795	Right Lever
2	B07-16261	Shroud	21	B07-18802	Pin
3	B07-16260	Coupling Half	22	B07-18797	Cam Follower
4	B07-16259	Coupling Half	23	B07-16310	Cam Shaft
5	B07-16258	Support	24	B07-16287	Cam Wheel
6	B07-30257	Bearing	25	B07-18803	Pin
7	B07-16257	Coupling Pin	26	B07-18805	Washer
8	B07-16255	Bracket	27	B07-16304	Lever
9	B07-16254	Cover Back Plate	28	B07-16306	Bush
10	B07-16314	Cover	29	B07-0015010025	Lever
11	B07-16286	Cam Wheel	30	B07-16308	Pin
12	B07-16315	Cam Screw	31	B07-16305	Rod
13	B07-16282	Locking Disc	32	B07-16309	Support
14	B07-5488	Locking Screw	33	B07-16270	Support
15	B07-12317	Cover Screw	34	B07-16313	Spacer
16	B07-18796	Left Lever	35	B07-16220	Washer
18	B07-33979	Clamp			
19	B07-33822	Left Spring			

BDC 300 – Nozzle Line Assembly


TAV.D28

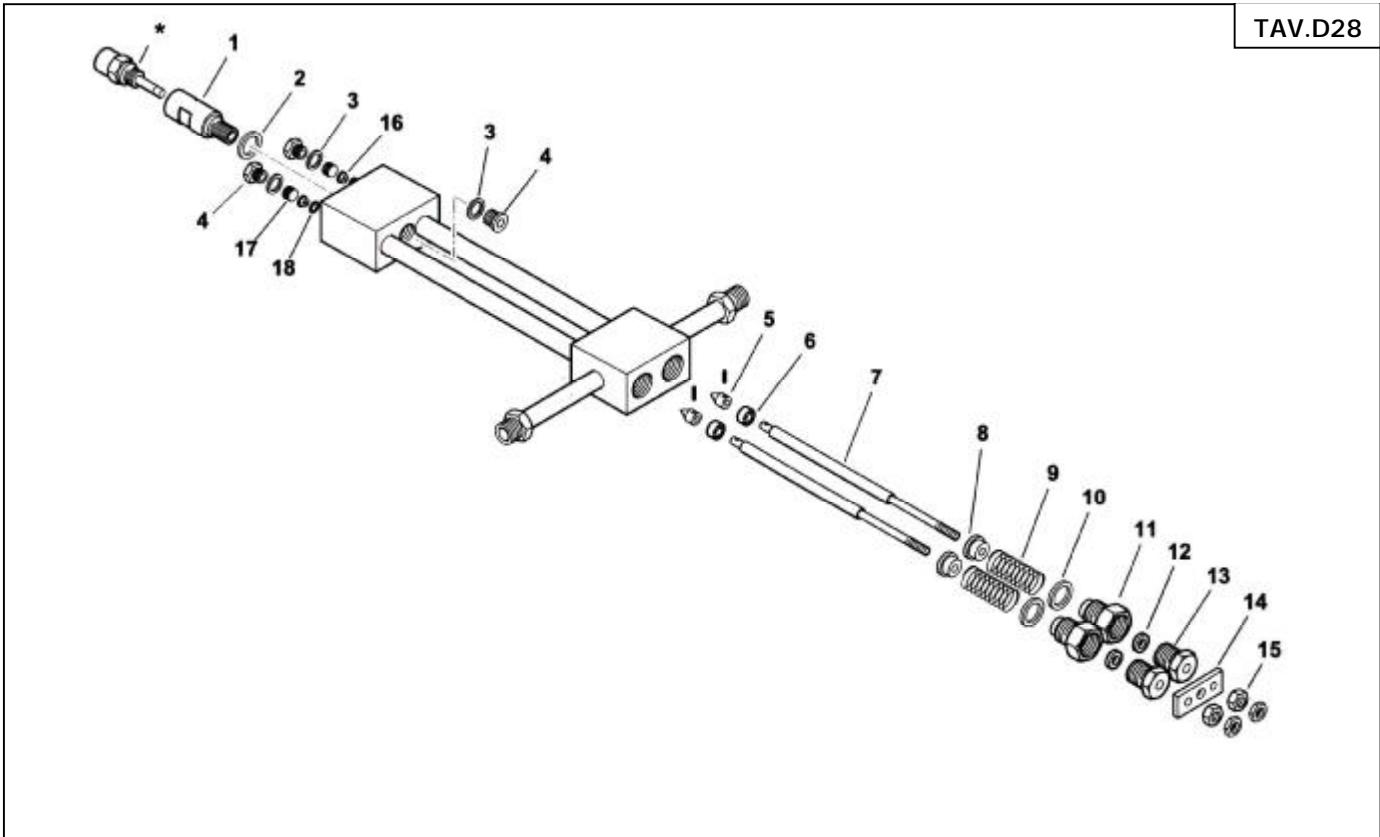

Key	Part No	Description	Key	Part No	Description
1	B07-27611	Nozzle Holder	14	B07-27628	Plate
2	B07-23066	Washer	15	B07-27625	Nut
3	B07-23064	Washer	16	B07-27612	Bush
4	B07-23067	Bush	17	B07-27609	Threaded Collar
5	B07-27631	Pin	18	B07-23063	Washer
6	B07-27614	Piston			
7	B07-44103	Rod			
8	B07-27621	Bush			
9	B07-19420	Spring			
10	B07-23065	Washer			
11	B07-27626	Bush			
12	B07-23093	Seal			
13	B07-27623	Bush			

BDC 300 – Magnetic Assembly


TAV.G9

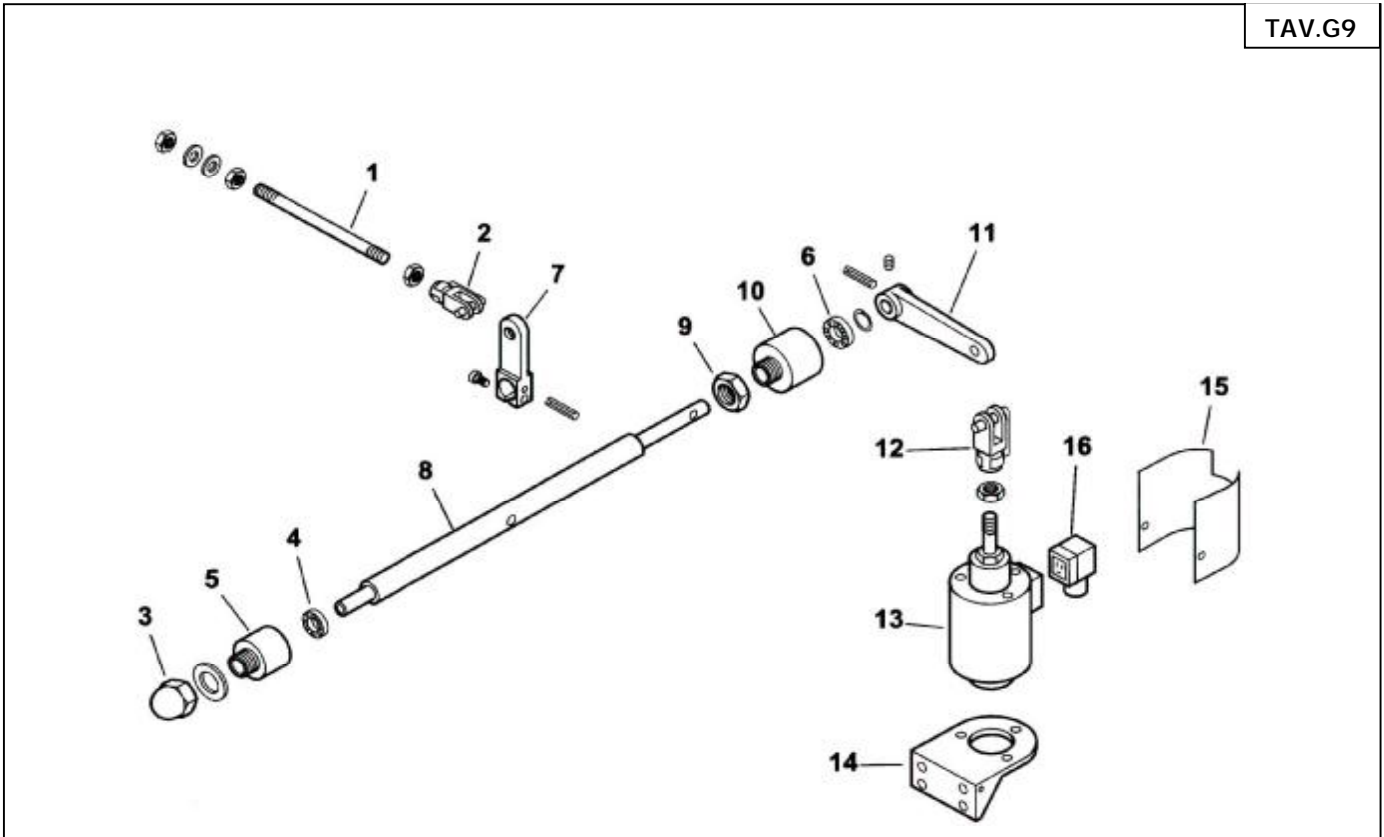

Key	Part No	Description	Key	Part No	Description
1	B07-57080	Rod	14	B07-33265	Bracket
2	B07-30543	Fork	15	B07-33266	Cover
3	B07-23056	Nut	16	B07-30761	Connector
4	B07-23055	Bearing			
5	B07-27635	Bush			
6	B07-23054	Bearing			
7	B07-27638	Lever			
8	B07-27640	Rod			
9	B07-27637	Nut			
10	B07-27636	Bush			
11	B07-27641	Lever			
12	B07-27634	Fork			
13	B07-0005250067	Electro Magnet			


BDC 300 – Gas Train

TAV.B260

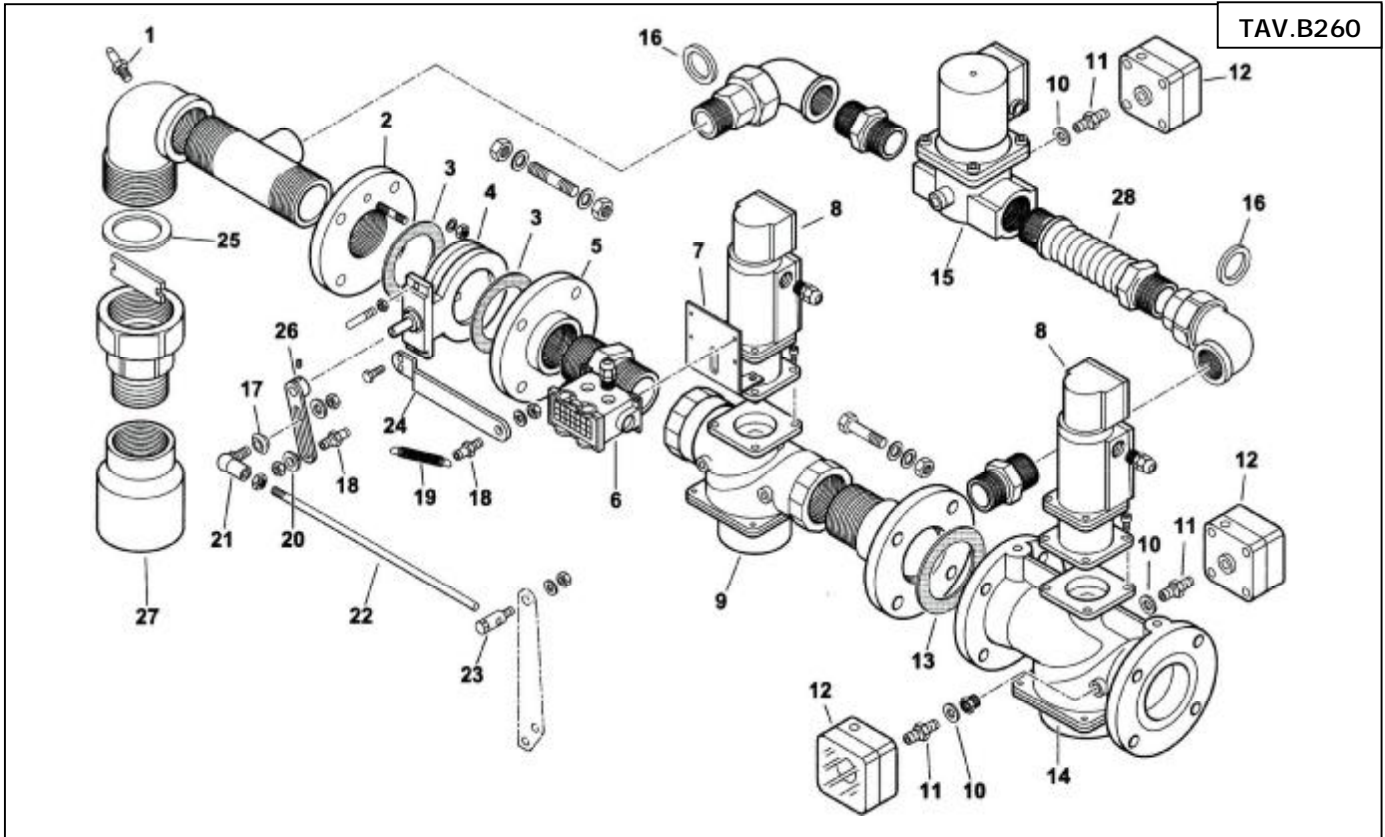

Key	Part No	Description	Key	Part No	Description
1	B07-31483	Pressure Nipple	16	B07-0005180005	Gasket
2	B07-0006020042	Flange	17	B07-35621	Bush
3	B07-23768	Gasket for Flange	18	B07-17979	Lever Screw
4	B07-0006020049	Butterfly Valve	19	B07-18393	Spring
5	B07-23409	Flange	20	B07-35360	Spacer
6	B07-19561	10 Pole Connector	21	B07-18695	Elbow Fitting
7	B07-59565	Support	22	B07-41516	Linkage
8	B07-31176	Servo Motor	23	B07-19555	Linkage Clamp
9	B07-31179	Valve Body	24	B07-41531	Support
10	B07-4987	Washer	25	B07-0005180006	Gasket
11	B07-0010060030	Nipple	26	B07-35633	Lever
12	B07-23375	Pressure Switch	27	B07-39194	Connector
13	B07-23129	Gasket	28	B07-0005100072	Coupling
14	B07-31180	Solenoid Valve			
15	B07-0005090058	Valve Body			
	B07-0005090096	Coil			
	B07-0005090088	Valve Stem			


TAV.L1

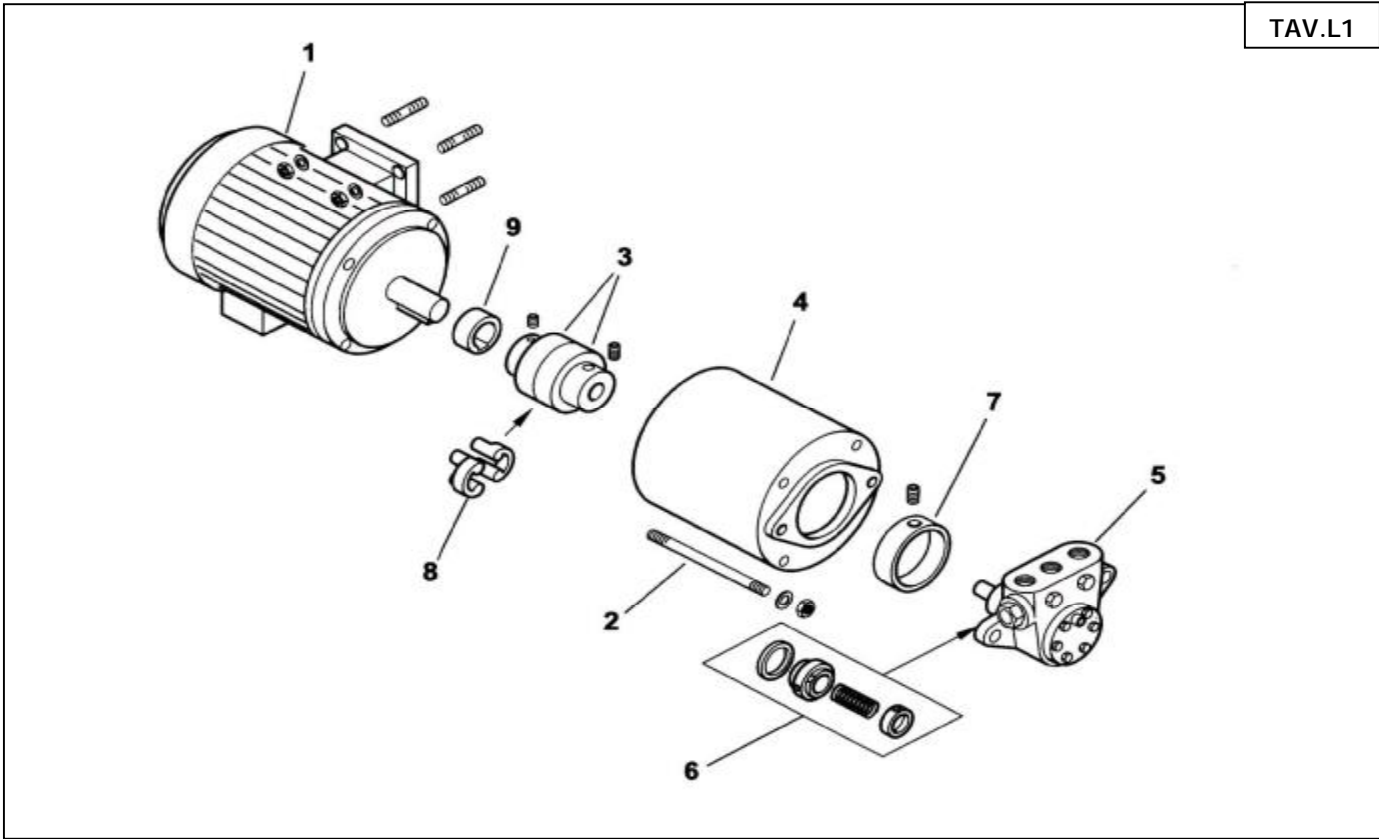

Key	Part No	Description	Key	Part No	Description
1	B07-30766	Motor	6	B07-95519	Sealing Assy
2	B07-18708	Fixing Bolt	7	B07-36824	Collar
3	B07-36823	Coupling	8	B07-17886	Inner Coupling
4	B07-39105	Housing	9	B07-38595	Spacer
5	B07-0005060022	Pump			

BDC 300 – Regulating Valve

TAV.H6

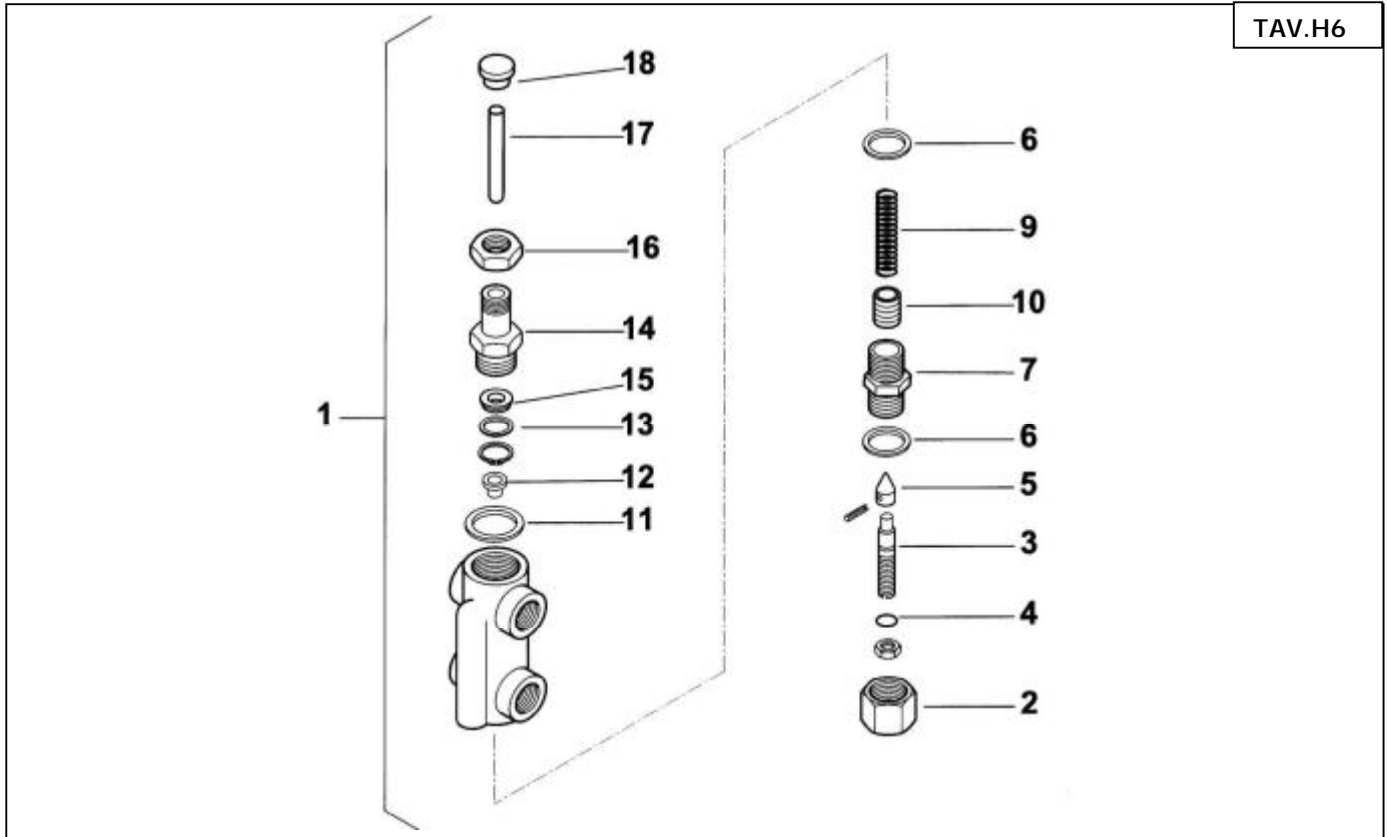

Key	Part No	Description	Key	Part No	Description
1	B07-16320	Valve Assembly	15	B07-23111	Seal
2	B07-16295	Cap	16	B07-32633	Nut
3	B07-16322	Screw	17	B07-16293	Pin
4	B07-0005180008	Seal	18	B07-32629	Cap
5	B07-27613	Pin			
6	B07-18257	Washer			
7	B07-16321	Nipple			
9	B07-16284	Spring			
10	B07-32635	Piston			
11	B07-3431	Washer			
12	B07-16323	Bush			
13	B07-32626	Washer			
14	B07-32631	Bush			