



BGN 120 – 2 Stage

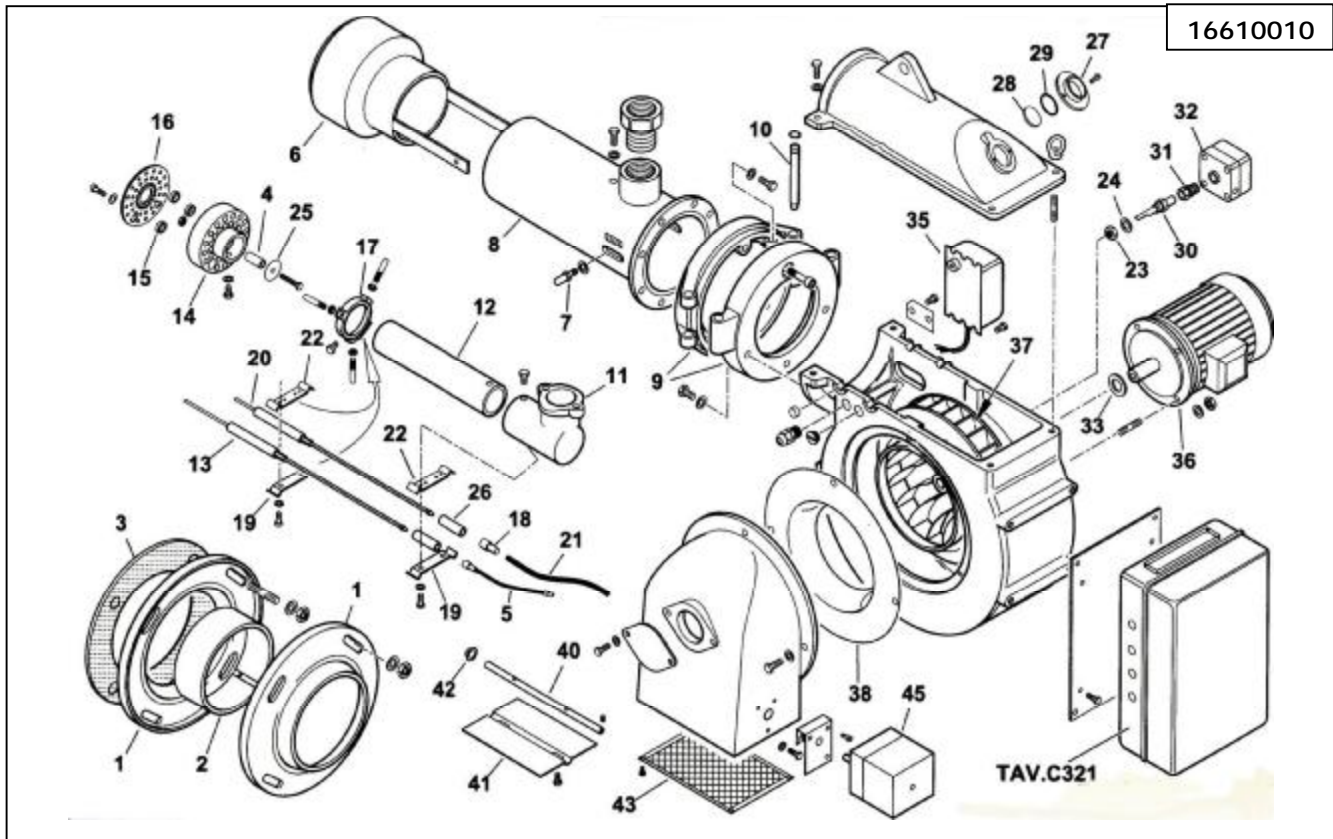

Key	Part No	Description	Key	Part No	Description
1	B07-15856	Flange	23	B07-35623	Fixing Nut
2	B07-15854	Flange Collar	24	B07-4987	Spacer
3	B07-15853	Gasket for Flange	25	B07-0010010007	Deflector
4	B07-0010010008	Spacer	26	B07-19424	Insulator
5	B07-0005140046	Ionisation Cable	27	B07-3172	Sight Glass Holder
6	B07-37958	End Cone	28	B07-0020020030	Sight Glass
7	B07-18476	Fixing Nut	29	B07-23839	O-Ring
8	B07-0010010003	Burner Tube	30	B07-0010060035	Nipple
9	B07-0010010021	Hinge Assembly	31	B07-31053	Bush
10	B07-56084	Hinge Pin	32	B07-30245	Pressure Switch
11	B07-0010010001	Gas Elbow	33	B07-28078	Spacer
12	B07-0010010010	Gas Tube	35	B07-15995	Transformer
13	B07-37954	Probe	36	B07-0005010001	Motor
14	B07-0010010025	Gas Head	37	B07-98186	Fan
15	B07-28171	Spacer	38	B07-29588	Air Guide
16	B07-28923	Brake Plate	40	B07-27598	Air Damper Pin
17	B07-37882	Support Ring	41	B07-27580	Air Flap
18	B07-0005060037	Ignition Cable Cap	42	B07-54056	Bush
19	B07-37960	Support	43	B07-34921	Air Inlet Guard
20	B07-37953	Electrode	45	B07-31380	Air Damper Motor
21	B07-30223	HT Cable			
22	B07-37961	Bracket			
				TAV.C321	Control Panel

Control Panel - BGN 120 – 2 Stage

TAV.C321

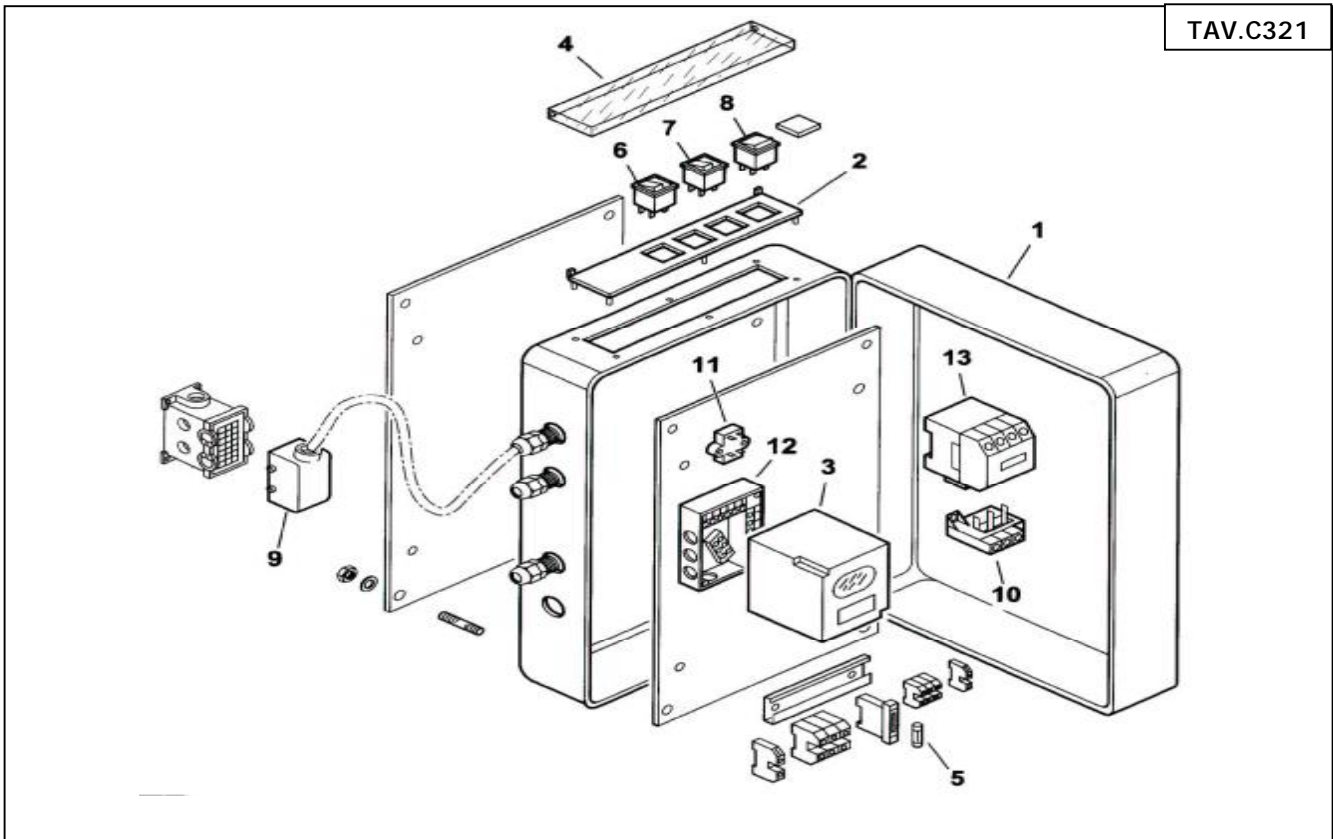

Key	Part No	Description	Key	Part No	Description
1	B07-34497	Box			
2	B07-0006060006	Switch Panel			
3	B07-0005030071	Control Box			
4	B07-61228	Cover			
5	B07-7456	Fuse			
6	B07-0005120039	On/Off Switch			
7	B07-0005120040	Lock Out Light			
8	B07-0005120041	Auto/Man – Line Swtich			
9	B07-0005130044	10 Pole Connector			
10	B07-0005110069	Overload			
11	B07-0005020034	Filter			
12	B07-23525	Wiring Base			
13	B07-0005110051	Contactora			