


BGN 200 Modulating


16720010

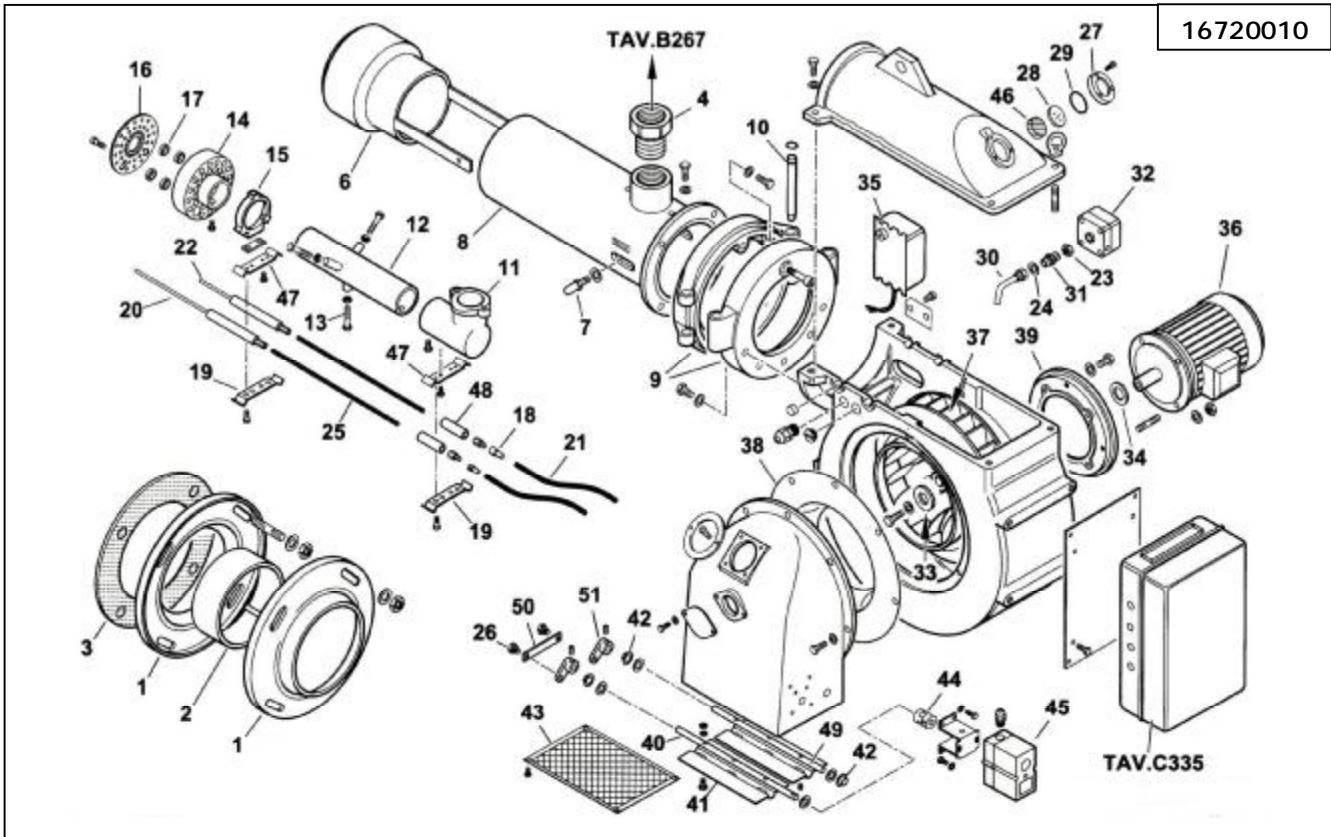

Key	Part No	Description	Key	Part No	Description
1	B07-29184	Flange	29	B07-23299	O-Ring
2	B07-29186	Flange Collar	30	B07-0015010113	Air Tube
3	B07-29185	Gasket for Flange	31	B07-28932	Nipple
4	B07-30930	Gas Entry Flange	32	B07-30245	Pressure Switch
6	B07-57130	End Cone	33	B07-29293	Spacer
7	B07-18476	Fixing Nut	34	B07-29175	Spacer
8	B07-57172	Burner Tube	35	B07-15995	Transformer
9	B07-57271	Hinge Assembly	36	B07-5468	Motor
10	B07-57173	Hinge Pin	37	B07-13024	Fan
11	B07-57125	Gas Elbow	38	B07-29174	Air Guide
12	B07-0012010036	Gas Tube	39	B07-29360	Flange
13	B07-45119	Screw	40	B07-0012120090	Air Damper Pin
14	B07-29358	Gas Head	41	B07-57029	Air Flap
15	B07-37882	Support Ring	42	B07-34314	Bush
16	B07-29276	Brake Plate	43	B07-0012010076	Air Inlet Guard
17	B07-29277	Spacer	44	B07-0006020188	Coupling
18	B07-0005060037	Ignition Cable Cap	45	B07-0006020266	Air Damper Motor
19	B07-57132	Support	46	B07-38610	Sight Glass
20	B07-57159	Ionisation Electrode	47	B07-57131	Bracket
21	B07-30223	HT Cable	48	B07-19424	Insulator
22	B07-57158	Electrode	49	B07-57033	Air Damper Pin
23	B07-35623	Fixing Nut	50	B07-29498	Lever Bracket
24	B07-4987	Spacer	51	B07-35677	Lever
25	B07-57160	Extension			
26	B07-35619	Lever Screw			
27	B07-38611	Sight Glass Holder			
28	B07-38609	Clear Sight Glass			
				TAV.C335	Control Panel
				TAV.B267	Gas Train

Control Panel - BGN 200 Modulating


TAV.C335

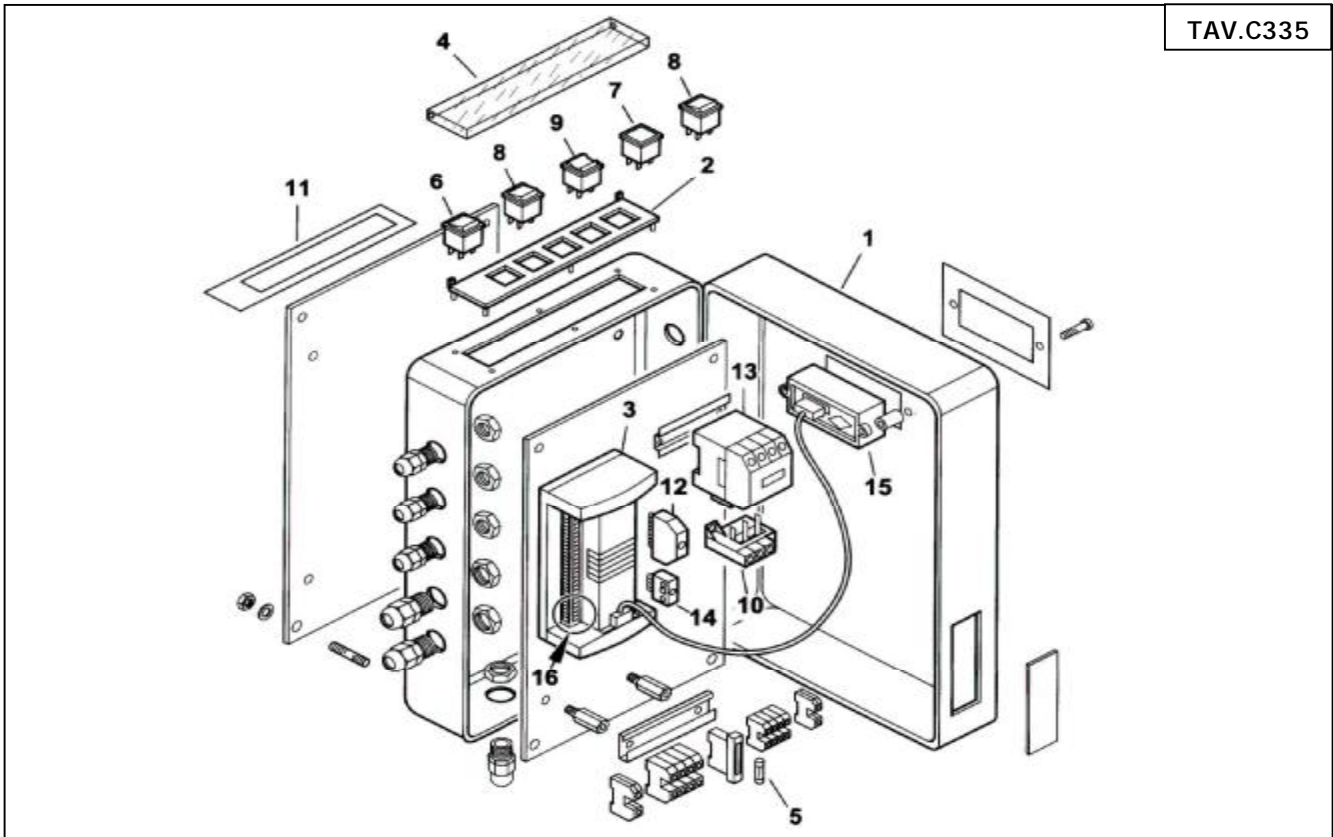

Key	Part No	Description	Key	Part No	Description
1	B07-0012010100	Box	14	B07-0005130043	4 Pole Connector
2	B07-0006060008	Switch Panel	15	B07-0005030152	Display
3	B07-0006020268	MPA22 Controller	16	B07-0005030148	MPA22 Connector
4	B07-61228	Cover			
5	B07-7456	Fuse			
6	B07-0005120068	On/Off Switch			
7	B07-0005120053	Lock Out Light			
8	B07-0005120041	Auto/Man - Line Switch			
9	B07-0005120038	Manual Switch			
10	B07-0005110070	Overload			
11	B07-0006060019	Switch Panel Badge			
12	B07-0005130051	7 Pole Connector			
13	B07-0005110051	Contactora			

Gas Train - BGN 200 Modulating

TAV.B267

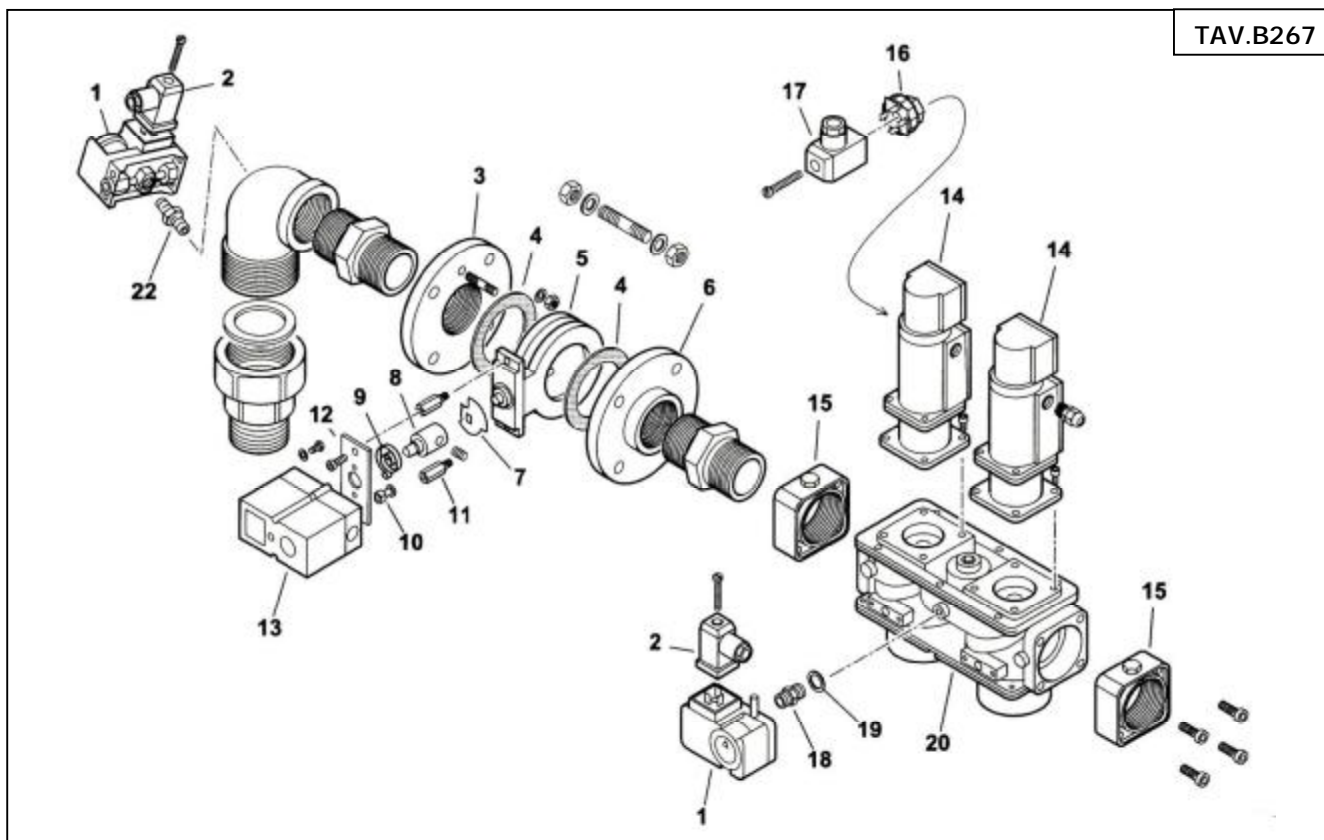

Key	Part No	Description	Key	Part No	Description
1	B07-0005040068	Pressure Switch	14	B07-31176	Valve Actuator
2	B07-23522	Pressure Switch Connector	15	B07-0005090195	Valve Flange
3	B07-0006020042	Flange DN50	16	B07-0005140453	Valve Block Connector
4	B07-23768	Gasket for Flange	17	B07-23521	Valve Connector
5	B07-0006020253	Butterfly Valve	18	B07-0010060030	Nipple
6	B07-23409	Flange DN50	19	B07-4987	Washer
7	B07-0006020254	Position Indicator	20	B07-0005090188	Valve Body
8	B07-0006020250	Coupling	22	B07-0005150151	Nipple
9	B07-0012010105	Spring			
10	B07-0012010106	Pin			
11	B07-0022030047	Spacing Pillar			
12	B07-0012120092	Bracket			
13	B07-0006020265	Servo Motor			