


15280015

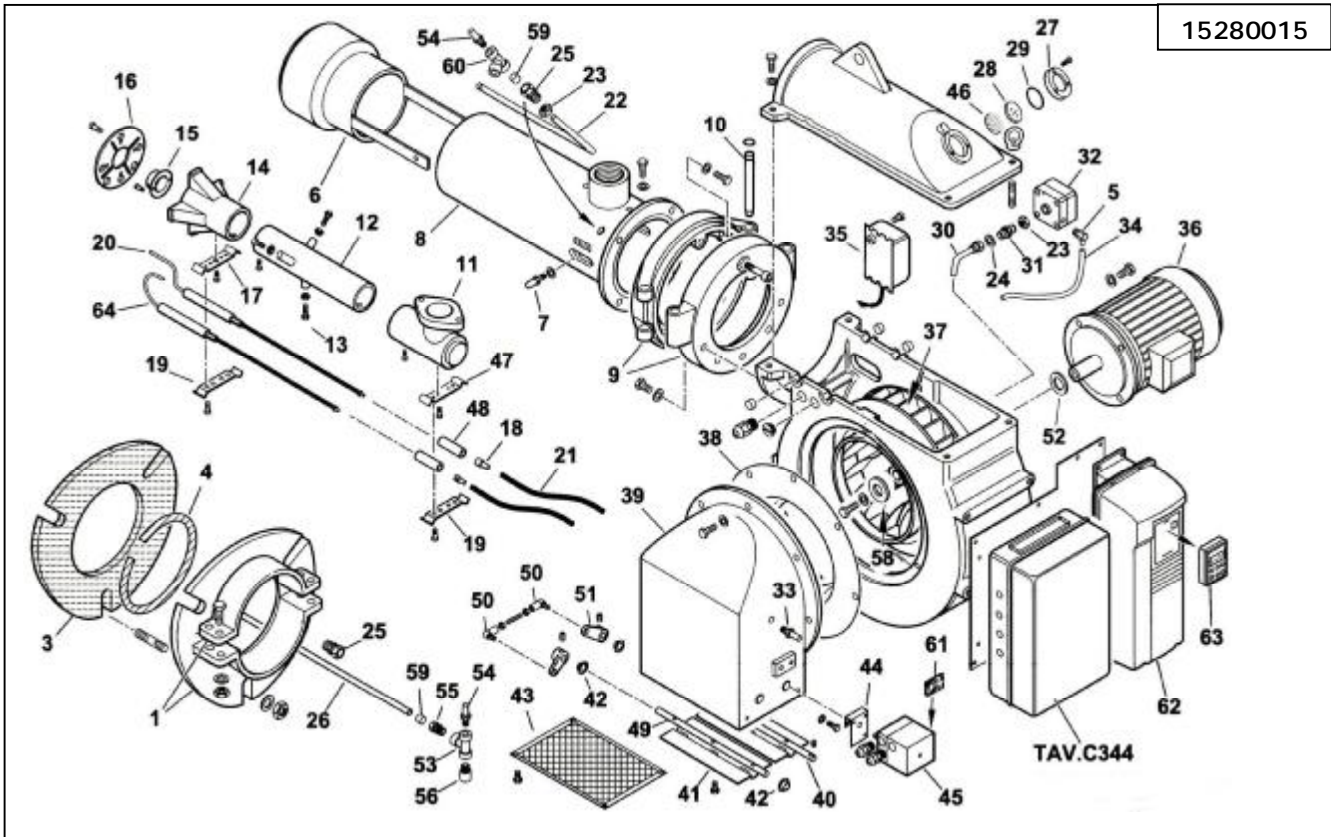


Key	Part No	Description
1	B07-0012120050	Flange
3	B07-0012120051	Gasket for Flange
4	B07-23215	Cord Seal
5	B07-0005040026	Pressure Nipple 90°
6	B07-0012120065	End Cone
7	B07-18476	Fixing Nut
8	B07-0012120059	Burner Tube
9	B07-13421	Hinge Assembly
10	B07-13382	Hinge Pin
11	B07-13387	Gas Elbow
12	B07-0012120053	Gas Tube
13	B07-0015010122	Screw
14	B07-0012120054	Gas Head
15	B07-0012120056	Bush
16	B07-0012120057	Brake Plate
17	B07-0012120058	Bracket
18	B07-0005060037	Ignition Cable Cap
19	B07-57132	Support
20	B07-0012010092	Electrode
21	B07-30223	HT Cable
22	B07-0012120060	Impulse Pipe
23	B07-35623	Nut
24	B07-4987	Spacer
25	B07-0006020174	Impulse Pipe Fixing
26	B07-0012010062	Impulse Pipe
27	B07-38611	Sight Glass Holder
28	B07-38609	Clear Sight Glass
29	B07-23299	O-Ring
30	B07-0015010113	Impulse Pipe
31	B07-28932	Nipple
32	B07-23912	Pressure Switch
33	B07-58029	Pressure Nipple

Key	Part No	Description
34	B07-31492	PVC Tube
35	B07-15995	Transformer
36	B07-30104	Motor
37	B07-29361	Fan
38	B07-13028	Air Guide
39	B07-0012010065	Air Box
40	B07-0012010068	Air Damper Pin
41	B07-0012010067	Air Damper Flap
42	B07-0019010010	Bush
43	B07-0012010094	Air Inlet Guard
44	B07-54059	Bracket
45	B07-23205	Air Damper Motor
46	B07-0005040027	Cover
47	B07-38610	Sight Glass
48	B07-57131	Support
49	B07-19424	Insulator
50	B07-57033	Pin
51	B07-18695	Elbow Fixing
52	B07-16301	Lever
53	B07-29364	Spacer
54	B07-23845	T Connector
55	B07-31483	Pressure Nipple
56	B07-30987	Impulse Pipe Fixing
57	B07-0005150116	Rapid Connector
58	B07-28909	Spacer
59	B07-0005150117	Olve
60	B07-0005150115	T Connector
61	B07-0005040054	Potentiometer
62	B07-0005030134	Inverter
63	B07-0005030160	Inverter Pad
	TAV.C344	Control Panel

Control Panel - BGN 390 LX V

TAV.C344

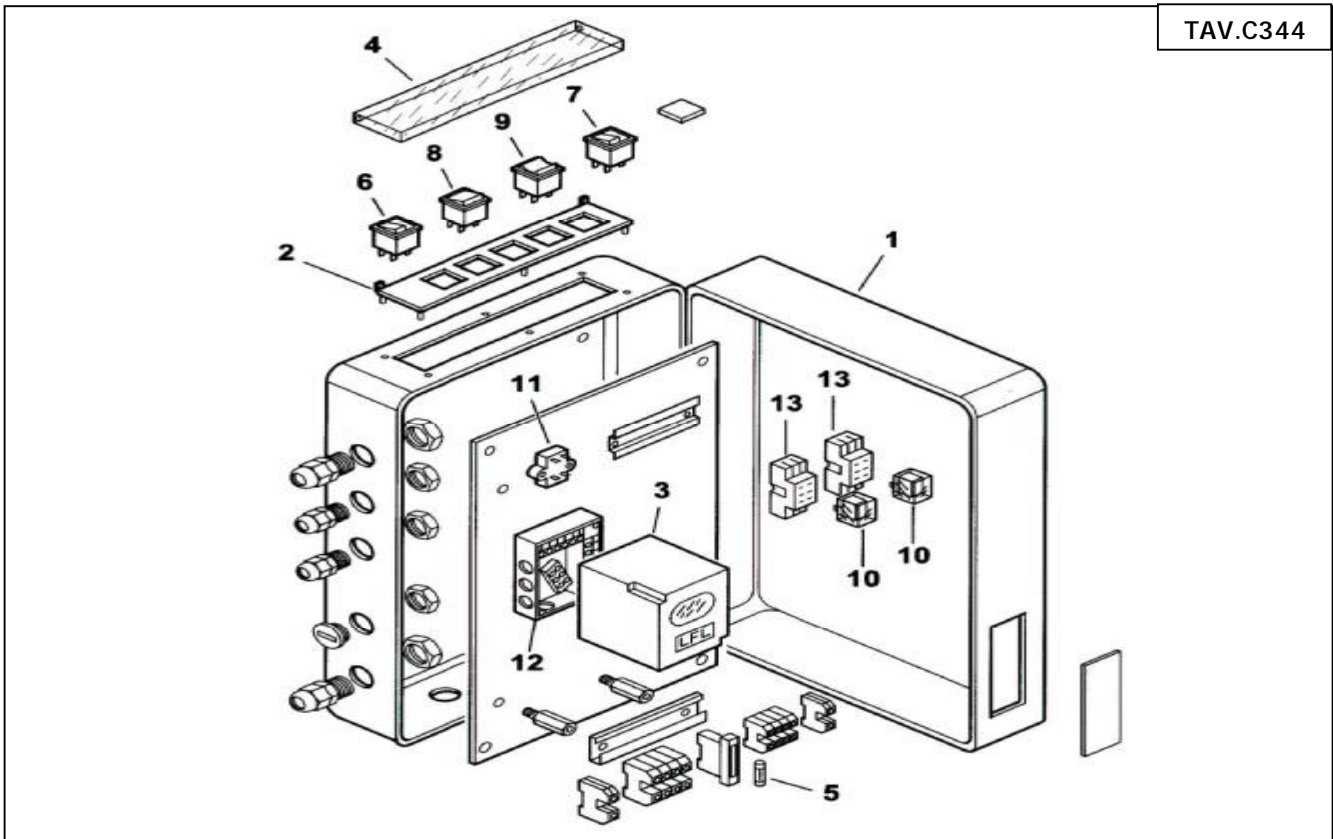

Key	Part No	Description	Key	Part No	Description
1	B07-0010060098	Box			
2	B07-0006060008	Switch Panel			
3	B07-0005030071	Control box			
4	B07-61228	Cover			
5	B07-7456	Fuse			
6	B07-0005120039	On/Off Switch			
7	B07-0005120040	Lock Out Light			
8	B07-0005120041	Auto/Man – Line Switch			
9	B07-0005120038	Manual Switch			
10	B07-30460	Overload			
11	B07-0005020034	Filter			
12	B07-23525	Wiring Base			
13	B07-0005110006	Relay Base			