


15320015

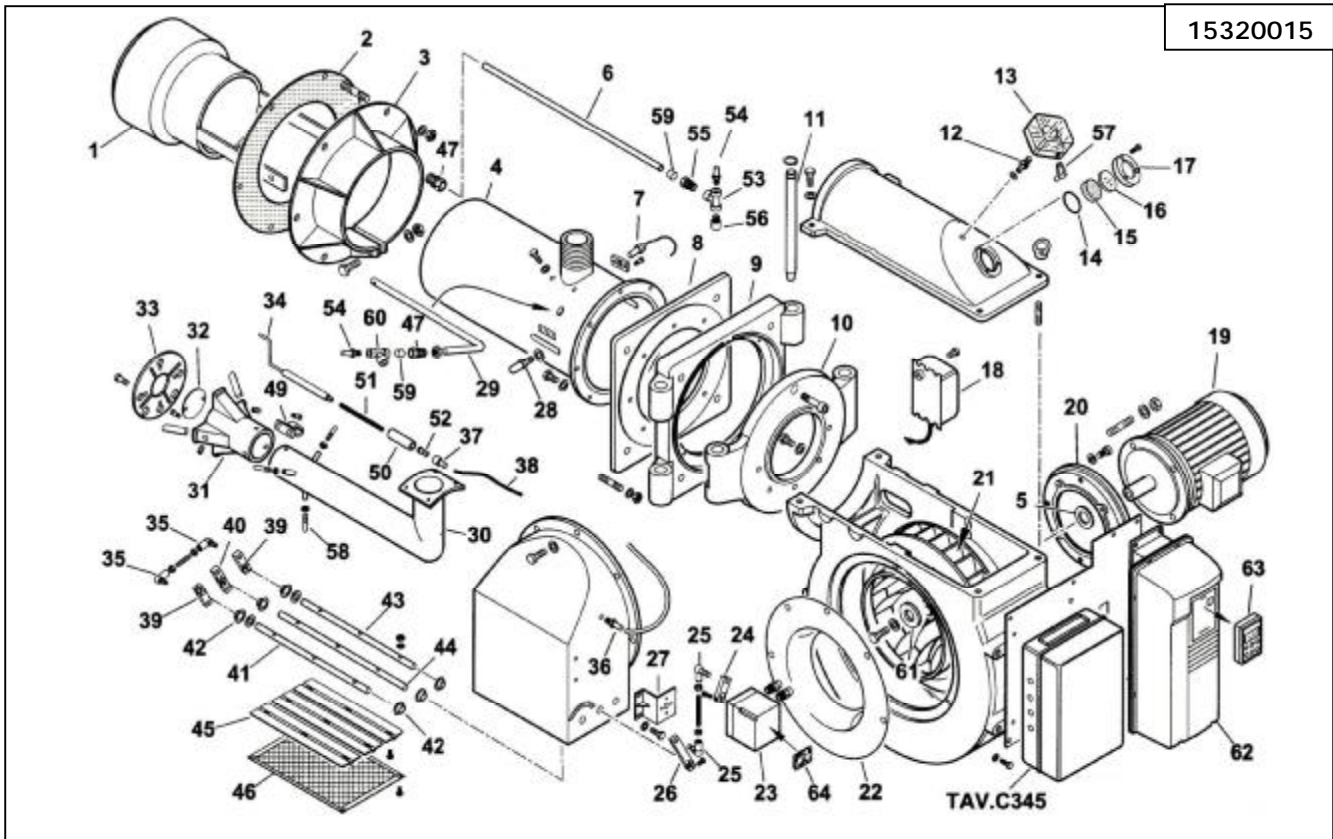


| Key | Part No | Description |
|-----|----------------|---------------------|
| 1 | B07-45232 | End Cone |
| 2 | B07-45244 | Gasket for Flange |
| 3 | B07-45239 | Flange |
| 4 | B07-45238 | Burner Tube |
| 5 | B07-44858 | Spacer |
| 6 | B07-45237 | Impulse Pipe |
| 7 | B07-30837 | UV Cell |
| 8 | B07-45226 | Flange |
| 9 | B07-45227 | Hinge |
| 10 | B07-0014020002 | Hinge |
| 11 | B07-0014020005 | Pin |
| 12 | B07-18722 | Nipple |
| 13 | B07-23912 | Pressure Switch |
| 14 | B07-23299 | O-Ring |
| 15 | B07-38610 | Sight Glass (fume') |
| 16 | B07-38609 | Sight Glass |
| 17 | B07-38611 | Sight Glass Holder |
| 18 | B07-15995 | Transformer |
| 19 | B07-30533 | Motor |
| 20 | B07-45000 | Flange |
| 21 | B07-44772 | Fan |
| 22 | B07-44774 | Air Guide |
| 23 | B07-31071 | Air Damper Motor |
| 24 | B07-45240 | Lever |
| 25 | B07-18695 | Lever Elbow |
| 26 | B07-45242 | Lever |
| 27 | B07-0014060010 | Support |
| 28 | B07-18476 | Fixing Nut |
| 29 | B07-45236 | Impulse Pipe |
| 30 | B07-45231 | Gas Tube |
| 31 | B07-45284 | Gas Head |
| 32 | B07-45230 | Diaphragm |
| 33 | B07-45228 | Brake Plate |

| Key | Part No | Description |
|-----|----------------|---------------------|
| 34 | B07-45243 | Electrode |
| 35 | B07-18690 | Elbow Fixing |
| 36 | B07-31483 | Pressure Nipple |
| 37 | B07-0005060037 | Ignition Cable Cap |
| 38 | B07-30223 | HT Cable |
| 39 | B07-45224 | Lever |
| 40 | B07-45225 | Lever |
| 41 | B07-45247 | Pin |
| 42 | B07-0019010010 | Bush |
| 43 | B07-13337 | Pin |
| 44 | B07-13336 | Pin |
| 45 | B07-45223 | Air Damper Flap |
| 46 | B07-13372 | Air Inlet Guard |
| 47 | B07-0006020174 | Impulse Pipe Fixing |
| 48 | B07-45234 | Reduction Nipple |
| 49 | B07-45286 | Electrode Holder |
| 50 | B07-23928 | Insulator |
| 51 | B07-45283 | Extension |
| 52 | B07-53615 | Pressure Nipple |
| 53 | B07-23845 | T Connector |
| 54 | B07-31483 | Pressure Nipple |
| 55 | B07-30987 | Impulse Pipe Fixing |
| 56 | B07-0005150116 | Rapid Connector |
| 57 | B07-0005040026 | Pressure Nipple 90° |
| 58 | B07-44114 | Pin |
| 59 | B07-0005150117 | Olive |
| 60 | B07-0005150115 | T Connector |
| 61 | B07-0022030036 | Spacer |
| 62 | B07-0005030145 | Inverter |
| 63 | B07-0005030160 | Inverter Pad |
| 64 | B07-0005040053 | Potentiometer |
| | TAV.C345 | Control Panel |

Control Panel - BGN 540 LX V

TAV.C345

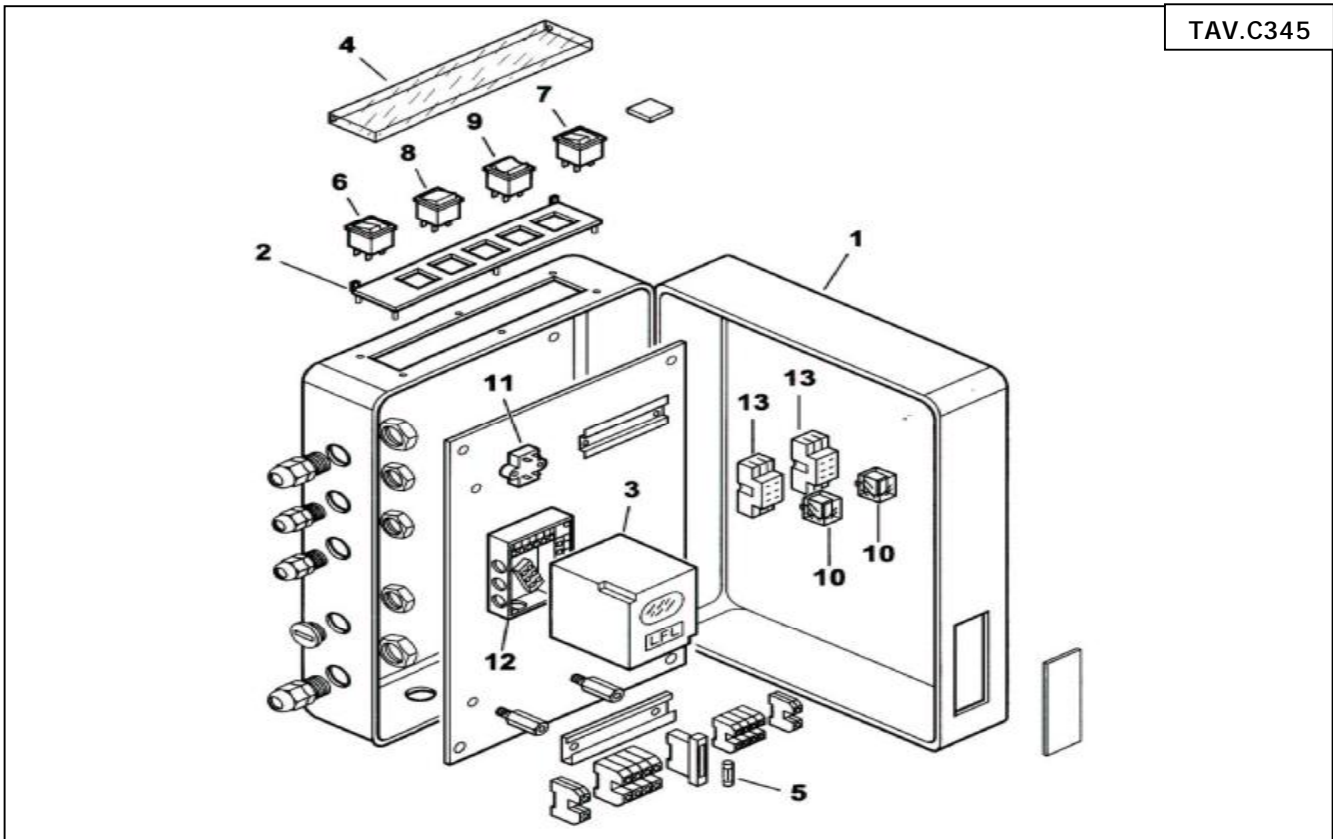

| Key | Part No | Description | Key | Part No | Description |
|-----|----------------|------------------------|-----|---------|-------------|
| 1 | B07-0010060098 | Box | | | |
| 2 | B07-0006060008 | Switch Panel | | | |
| 3 | B07-0005030071 | Control Box | | | |
| 4 | B07-61228 | Cover | | | |
| 5 | B07-7456 | Fuse | | | |
| 6 | B07-0005120039 | On/Off Switch | | | |
| 7 | B07-0005120040 | Lock Out Light | | | |
| 8 | B07-0005120041 | Auto/Man – Line Switch | | | |
| 9 | B07-0005120038 | Manual Switch | | | |
| 10 | B07-30460 | Overload | | | |
| 11 | B07-0005020034 | Filter | | | |
| 12 | B07-23525 | Wiring Base | | | |
| 13 | B07-0005110006 | Relay Base | | | |