


Key	Part No	Description
1	B07-0010060079	Flange
3	B07-0010060089	Gasket for Flange
4	B07-30149	Cord Seal
5	B07-0005040026	Pressure Nipple 90°
6	B07-0010060101	End Cone
7	B07-18476	Fixing Nut
8	B07-0010060097	Burner Tube
9	B07-34991	Hinge Assembly
10	B07-56084	Hinge Pin
11	B07-34911	Gas Elbow
12	B07-0010060088	Gas Tube
13	B07-57133	Pin
14	B07-0010060083	Mixer
15	B07-0010060082	Bush
16	B07-0010060081	Brake Plate
17	B07-0010060090	Bracket
18	B07-0005060037	Ignition Cable Cap
19	B07-34929	Support
20	B07-0010060084	Electrode
21	B07-30223	HT Cable
22	B07-0010060105	Impulse Pipe
23	B07-35623	Fixing Nut
24	B07-4987	Washer
25	B07-0006020174	Connector
26	B07-0010060086	Impulse Pipe
27	B07-3172	Sight Glass Holder
28	B07-0020020030	Sight Glass
29	B07-23839	Gasket

Key	Part No	Description
30	B07-0010060035	Nipple
31	B07-19814	Impulse Pipe Fixing
32	B07-23912	Pressure Switch
33	B07-58029	Pressure Nipple
34	B07-31492	PVC Tube
35	B07-15995	Transformer
36	B07-0005010150	Motor+ Inverter
37	B07-98186	Fan
38	B07-29588	Air Guide
39	B07-0010060091	Air Box
40	B07-0010060095	Air Damper Pin
41	B07-0010060104	Air Damper Flap
42	B07-0017030037	Bush
43	B07-0010060117	Air Inlet Guard
44	B07-54059	Support
45	B07-23205	Air Damper Motor
	B07-0005040027	Cover
46	B07-28078	Spacer
47	B07-0005150116	Rapid Connector
48	B07-30987	Impulse Ppe Fixing
49	B07-31483	Pressure Nipple
50	B07-23845	T Connector
51	B07-0005150117	Olive
52	B07-0005150115	Tconnector
53	B07-0005030161	Programmer
54	B07-0005040054	Potentiometer
	TAV.C342	Control Panel

Control Panel - BGN 60 LX V

TAV.C342

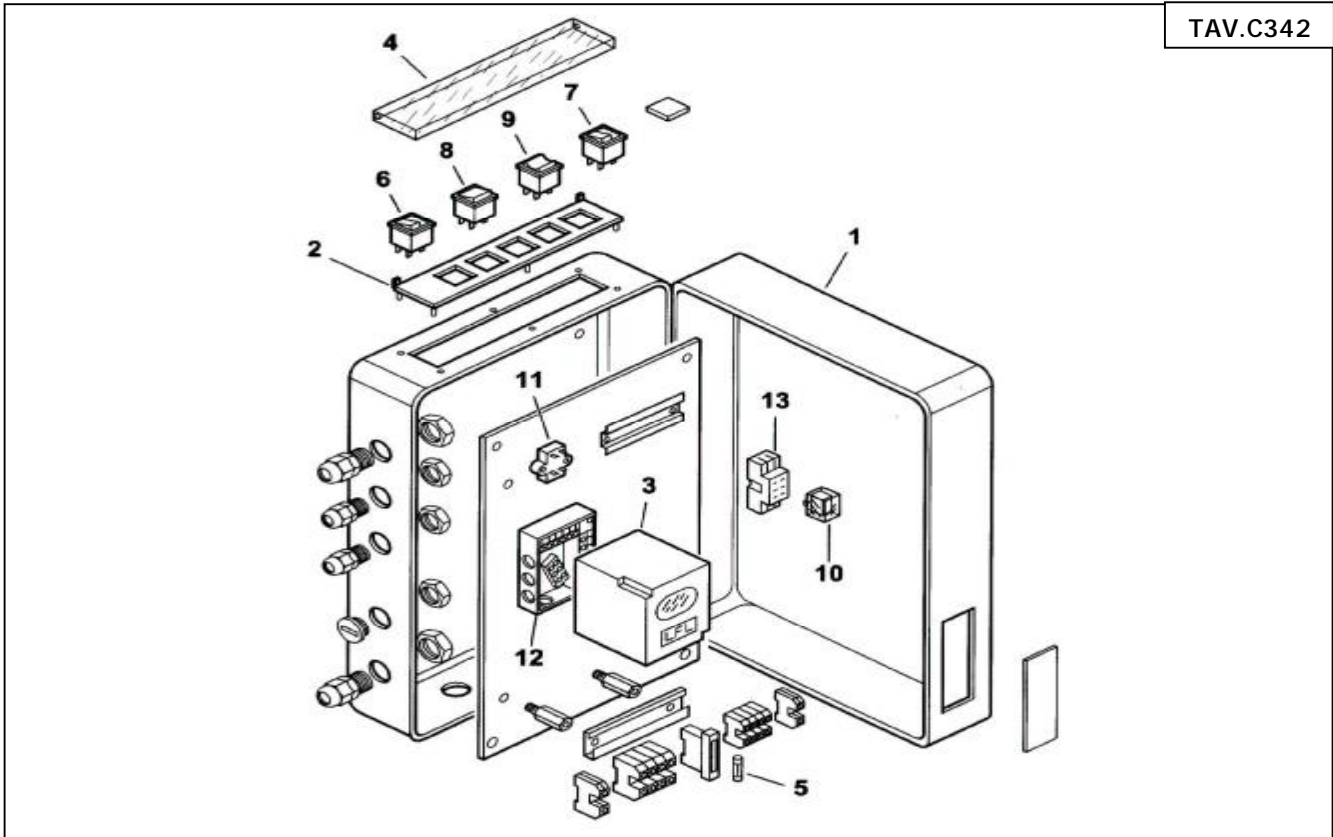

Key	Part No	Description	Key	Part No	Description
1	B07-0010060098	Box			
2	B07-0006060008	Switch Panel			
3	B07-0005030071	Control Box			
4	B07-61228	Cover			
5	B07-7456	Fuse			
6	B07-0005120039	On/Off Switch			
7	B07-0005120040	Lock Out Light			
8	B07-0005120041	Auto/Man - Line Switch			
9	B07-0005120038	Manual Switch			
10	B07-30460	Overload			
11	B07-0005020034	Filter			
12	B07-23525	Wiring Base			
13	B07-0005110006	Relay Base			