


Key	Part No	Description
1	B07-0011040041	Flange
3	B07-0011040056	Gasket for Flange
4	B07-23215	Cord Seal
5	B07-0005040026	Pressure Nipple 90°
6	B07-0011040059	End Cone
7	B07-18476	Fixing Nut
8	B07-0011040061	Burner Tube
9	B07-41611	Hinge Assembly
10	B07-56084	Hinge Pin
11	B07-0010010001	Gas Elbow
12	B07-0011040072	Gas Tube
13	B07-0011040047	Pin
14	B07-0011040040	Gas Head
15	B07-0011040039	Bush
16	B07-0011040038	Brake Plate
17	B07-0011040046	Bracket
18	B07-0005060037	Ignition Cable Cap
19	B07-37960	Support
20	B07-0011040043	Electrode
21	B07-30223	HT Cable
22	B07-0017030028	Impulse Pipe
23	B07-35623	Nut
24	B07-4987	Spacer
25	B07-0006020174	Impulse Pipe Fixing
26	B07-0010060086	Impulse Pipe
27	B07-4143	Sight Glass Holder
28	B07-4145	Sight Glass
29	B07-4146	O-Ring
30	B07-0010060020	Nipple
31	B07-19814	Impulse Pipe Fixing
32	B07-23912	Pressure Switch

Key	Part No	Description
33	B07-58029	Pressure Nipple
34	B07-31492	PVC Tube
35	B07-15995	Transformer
36	B07-0005010151	Motor & Inverter
37	B07-15855	Fan
38	B07-15842	Air Guide
39	B07-0011040042	Air Box
40	B07-0011040058	Air Damper Pin
41	B07-0011040049	Air Damper Flap
42	B07-0017030037	Bush
43	B07-0011040045	Air Inlet Guard
44	B07-54059	Support
45	B07-23205	Air Damper Motor
	B07-0005040027	Cover
46	B07-35687	Spacer
47	B07-4144	Sight Glass Gasket
48	B07-0011040048	Fixing Bracket
49	B07-37961	Bracket
50	B07-19424	Insulator
51	B07-0005150117	Olive
52	B07-0005150115	T Connector
53	B07-23845	T Connector
54	B07-31483	Pressure Nipple
55	B07-30987	Impulse Pipe Fixing
56	B07-0005150116	Rapid Connector
57	B07-30381	O-Ring
58	B07-28909	Spacer
59	B07-0005030161	Inverter Pad
60	B07-0005040054	Potentiometer
	TAV.C342	Control Panel

# Control Panel BGN 120 LX V

TAV.C342

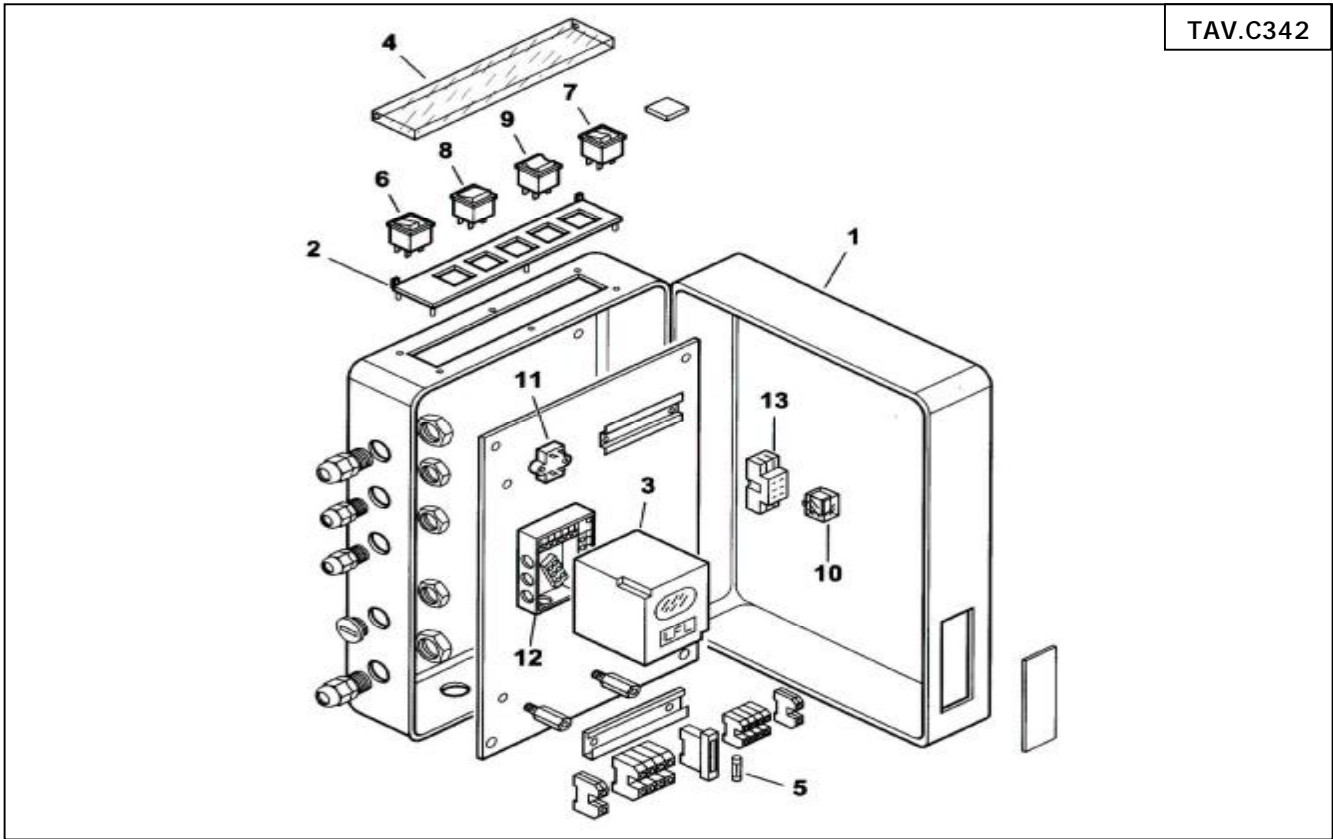

Key	Part No	Description	Key	Part No	Description
1	B07-0010060098	Box			
2	B07-0006060008	Switch Panel			
3	B07-0005030071	Control Box			
4	B07-61228	Cover			
5	B07-7456	Fuse			
6	B07-0005120039	On/Off Switch			
7	B07-0005120040	Lock Out Light			
8	B07-0005120041	Auto/Man – Line Switch			
9	B07-0005120038	Manual Switch			
10	B07-30460	Overload			
11	B07-0005020034	Filter			
12	B07-23525	Wiring Base			
13	B07-0005110006	Relay Base			